

Chapter 11 Suspension and steering systems

Contents

Section	Section
4	Balljoints - replacement.....
5	Front coil springs - removal and installation.....
6	Front lower control arms - removal and installation.....
2	Front stabilizer bar - removal and installation.....
1	Front suspension - general information.....
24	Ignition lock cylinder - removal and installation.....
22	Power steering gear - removal and installation.....
23	Power steering pump - removal and installation.....
21	Power steering system - bleeding.....
20	Power steering system - general information.....
9	Rear coil springs and insulators - removal and installation.....
12	Rear lower control arm - removal and installation.....
13	Rear lower control arm bushing - replacement.....
8	Rear shock absorbers - removal and installation.....
15	Rear stabilizer bar - removal and installation.....
7	Rear suspension - general information.....
24	Steering column switches - removal and installation.....
18	Steering knuckle - removal and installation.....
16	Steering system - general information.....
19	Steering wheel - removal and installation.....
3	Strut assembly - removal and installation.....
17	Tie-rods - removal and installation.....
14	Torque arm - removal and installation.....
10	Track bar - removal and installation.....
11	Track bar brace - removal and installation.....

Specifications

Front wheel alignment

1986 and earlier	Caster.....
	Camber.....
	Toe-in.....
1987 through 1990	Caster.....
	Camber.....
	Toe-in.....
1991 and 1992	Caster.....
	Camber.....
	Toe-in.....

Torque specifications

35	Steering knuckle-to-tie-rod end nut.....
168 in-lbs	Tie-rod clamp nuts.....
35	Tie-rod-to-intermediate rod nut.....
40	Pitman arm-to-intermediate rod nut.....
180	Pitman arm-to-steering gear nut.....
35	Idle arm-to-intermediate rod nut.....
50	Idle arm-to-frame nut.....

Ft.-lbs (unless otherwise indicated)

3.00-degrees	0.30-degree
4.7-degrees	0.30-degree
4.80-degrees	0.30-degree
0-inch	0-inch
1.00-degree	3/64-inch
3.00-degrees	3/64-inch