

Fig. 1: Engine Compartment & Headlights (Grid 1-3)  
1990 Chevrolet Camaro

**COMPONENT LOCATOR:**

A/C COMP RELAY	E 26
A/C CONTROL HEAD	C-E 27
A/C HI PRES CUTOFF SW	D 26, E 26
AIR SELECT VALVE (3.1L VIN T)	D 6
AIRBAGS	C-E 29-31
ALDL CONN (3.1L VIN T)	A 6
ALDL CONN (5.0L VIN E)	E 6
ALDL CONN (5.0L VIN F)	A 15
ALDL CONN (5.7L VIN 8)	A 19
ALTERNATOR	C 3
ASHTRAY LIGHT	E 30
AUDIO ALARM MODULE	C 28
AUTO TRANS (3.1L VIN T)	A 7
AUTO TRANS (5.0L VIN E)	D 8
AUTO TRANS (5.0L VIN F)	A 15
AUTO TRANS (5.7L VIN 8)	A 19
BACK-UP LT SW	D 24
BATTERY	E 1
BEAM SELECT SW	B 24
BLOWER HIGH SPEED RELAY	C 26
BLOWER SW (W/O A/C)	C 25
BRAKE SW	E 23
CANISTER PURGE SOL (3.1L VIN T)	E 6
CANISTER PURGE SOL (5.0L VIN F)	A 14
CANISTER PURGE SOL (5.7L VIN 8)	A 18
CIG LTR	E 30
CLUTCH START SW	B 33
CONVERTIBLE RELEASE	D 33-34
COOLANT FANS	D-E 20-21
CRUISE CONTROL	D-E 21-23
DEFOGGER CONTROL	B 25
DEFOGGER GRID	B 35
DIR FLASHER	D 25
DIR/HAZARD SW	E 24-25
DOME LT	E 28, E 29
DOOR SWITCHES	E 30
ECR SOL (3.1L VIN T)	E 18
ELECT CTRL MOD (3.1L VIN T)	A-E 4
ELECT CTRL MOD (5.0L VIN E)	A 8-11
ELECT CTRL MOD (5.0L VIN F)	A-E 12
ELECT CTRL MOD (5.7L VIN 8)	A-E 16
ENG COMPT LT	B 3
EST DISTRIBUTOR (5.7L VIN 8)	E 18
FOG LT SW & RLY	A-B 25-26
FUEL INJECTORS (3.1L VIN T)	D-E 7
FUEL INJECTORS (5.0L VIN E)	A-B 11
FUEL INJECTORS (5.0L VIN F)	B 15
FUEL INJECTORS (5.7L VIN 8)	B 19
FUEL PUMP IN-LINE FUSE (3.1L VIN T)	B 6
FUEL PUMP IN-LINE FUSE (5.0L VIN E)	C 9
FUEL PUMP IN-LINE FUSE (5.0L VIN F)	C 15
FUEL PUMP IN-LINE FUSE (5.7L VIN 8)	C 19
FUEL PUMP RELAY (3.1L VIN T)	B 7
FUEL PUMP RELAY (5.0L VIN E)	B 8
FUEL PUMP RELAY (5.0L VIN F)	C 15
FUEL PUMP RELAY (5.7L VIN 8)	C 19
FUS LINKS	A-C 2-3
FUSE BLOCK	B-C 21-22
GEAR SELECT SW	C 24
HATCH PULLDOWN UNIT	E 34-35
HATCH RELEASE	B 31
HAZARD FLASHER	D 28
HEATER/A/C CONTROL LT	E 27
HORN RELAY	D 28
IGN COIL (3.1L VIN T)	C 6
IGN COIL (5.0L VIN E)	E 10
IGN COIL (5.0L VIN F)	E 15
IGNITION SW	A 20-23
INST CLSTR	A-B 26-31
LIGHT SW	A 24
MAP LT	E 28
PASS KEY DECODER MODULE	A 32
POWER DOOR LOCKS	A-B 34
POWER MIRRORS	E 32-34
POWER SEATS	C-D 32-33
POWER WINDOWS	B-C 33-34
RADIO (PARTIAL)	C 28
RADIO AMP RELAY	C 29
SHIFT IND LT	D 24
STARTER	A 3
STARTER ENABLE RELAY	B 32
STOP LT SW	B 23
THEFT DETERRANT	A-B 32-33
VEHICLE SPEED SENSOR BUFFER	B 28
WIPER MOTORS	C-E 2-3
WIPER SWS	A-B 26-27

