


SPARK Plug OR SPARK TESTER

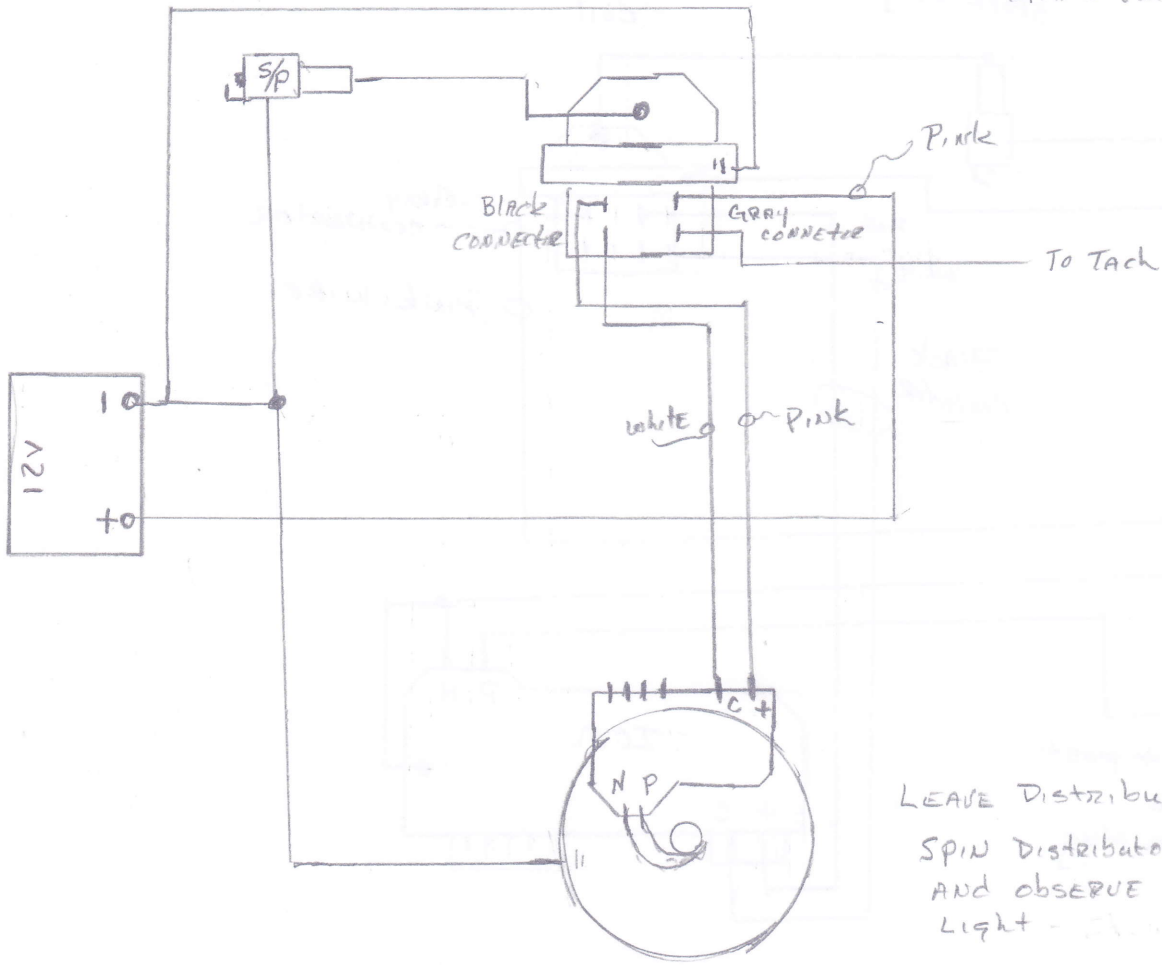

LEAVE Distributor Cap off  
SPIN Distributor shaft  
AND OBSERVE SPARK OR TESTER  
LIGHT - should spark