

INSTALLATION INSTRUCTION SHEET

GM PART NO. 12341693

ITEM REFERENCE TORQUE EXISTING AS PART OF


NOTICE: Do not attempt to install this sunshade if hatch glass is less than 70 degrees F. (21 C). Double faced tapes used to hold hardware parts to the glass will not properly adhere if temperature is lower. After installation, temperature is no longer important.

Since this sunshade will add approximately 16 pounds to the hatch assembly, it is recommended that the Rear Compartment Lift Lid Supports (gas springs) be changed to appropriate supports as listed in Group 12.187 of Dealer Parts Catalog.

Read these instructions completely **BEFORE** starting work. Follow each step carefully and completely. Clean your rear window thoroughly with a good quality glass cleaner (GM #1050427 or equivalent) prior to installation. Follow with isopropyl or Denatured Alcohol in areas where double faced tape will contact glass. This is to insure a clean, dry surface for best tape adhesion.

TOOLS & SUPPLIES REQUIRED:

- Glass Cleaner
- Alcohol
- Small Flat Blade Screwdriver
- 10mm Open or Box Wrench
- Cloth Rag

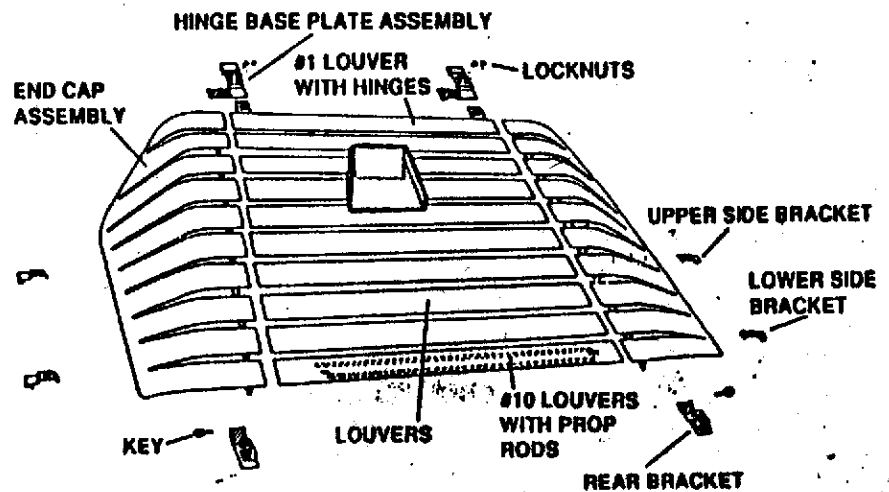

PART NO.

12339878

PAGE 1 OF 7