



ITEM REFERENCE

TORQUE

EXISTING AS PART OF

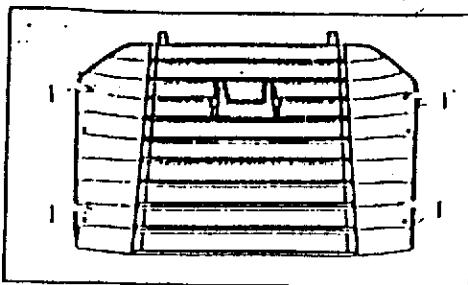

7. With the bottom lang firmly inserted, and the rest of the langs at least partially inserted, you are ready to complete the assembly. With both assemblers still working the top and bottom, start pushing the end cap into the louvers. This will take some pressure because you are expanding the ends of nine louvers at the same time. Wiggle the end cap while pushing until all are tightly assembled.

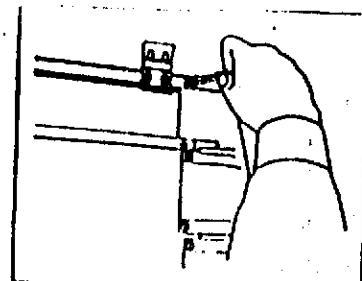

8. Reset the locking tabs on the louver ends by pressing firmly with a small, flat blade screwdriver. Check the part on the show side for any smeared glue - If any is present, clean carefully with alcohol.

PART NO.

12339878


west 4 or 7

## INSTALLATION INSTRUCTION SHEET

ITEM REFERENCE


TORQUE

EXISTING AS PART OF

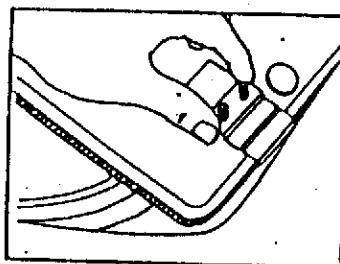

9. Now to install your sunshade on the car. The hinge base plates are installed first, one on each side 1/8" outboard of the "beauty buttons" which attach the hatch to the car. The hinge base snaps over the edge of the hatch trim molding. You will have to open the hatch some in order to slide the hinge base to its proper location. When hinge bases are pulled tight against the molding **WITHOUT GAPS** carefully remove protective strips from under the tapes and press firmly to the glass at least 15 seconds to insure good adhesion.

NOTE: Remember to clean glass with alcohol in areas where tape is to adhere and that temperature must be at least 70 degrees.

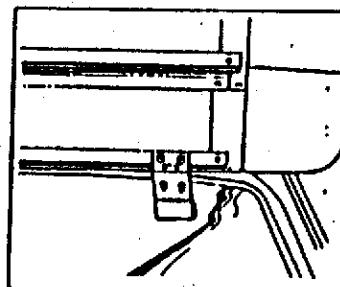

10. Carefully place the sunshade on the hatch so that the hinge slots slip over the hinge base studs. (Note, the hinge should fold back on itself). Lift the sunshade and install the 4 locknuts snugly enough to hold the sunshade in position but loosely enough to allow for adjustment within the slots. Close the hatch tightly.

PART NO.

12339878

west 5 or 7