

Receiver Wiring Adaptor

120 70-1858

IMPORTANT


Before starting, compare items on your invoice with items received. Thoroughly check packing materials. If an item is missing, please call **Crutchfield at 1-888-955-6000**.

Revision 04/08/15

STEP 1 -- CONNECT WIRES

- Match wires below to the matching function of each wire on your receiver (refer to instructions supplied with receiver). The wire colors of your new receiver may, or may not, match the wire colors of the adaptor. Match adaptor and receiver wires by function, disregarding color.
- Your receiver illumination wire could be Orange or Orange/White. As with other wires, match this wire to the illumination wire in this harness by function, not by color. If your receiver does not have an illumination wire, tape off the illumination wire.
- Individually tape off any unused wires.
- Make final wiring connections following instructions on the next page.

Note: The Red and Yellow wires are reversed in 85-87 Somersets and 86-89 Skylarks factory equipped with digital AM radios.

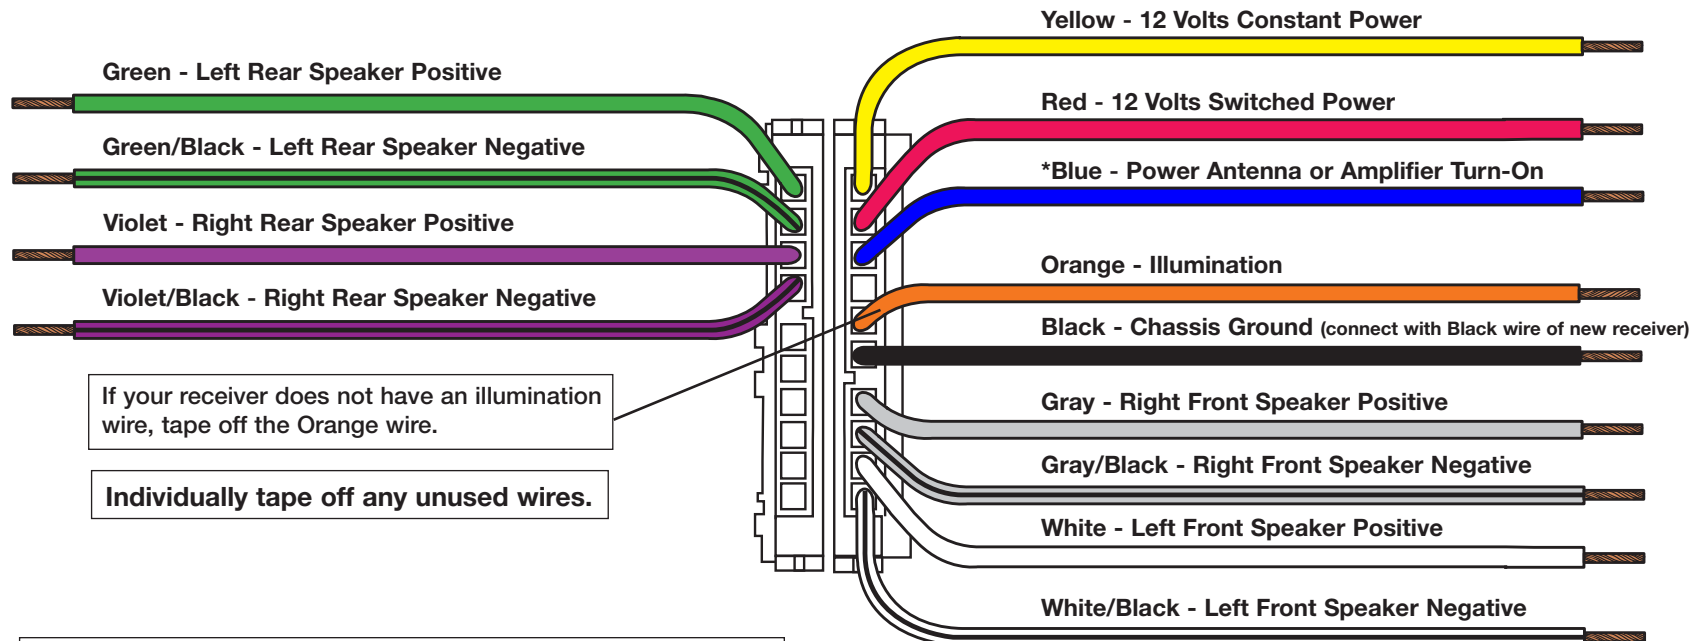

*If the vehicle was equipped with factory OnStar, the Remote Wire will be in Pin #29 on the separate 9-Pin plug (Pink Wire). The Amp Remote Wire from the receiver must be spliced to this Pink Wire.





CRUTCHFIELD
Copyright 2015 Crutchfield Corporation




120701858

STEP 2 -- CRIMP CONNECTIONS

Tools & Parts Required ▶

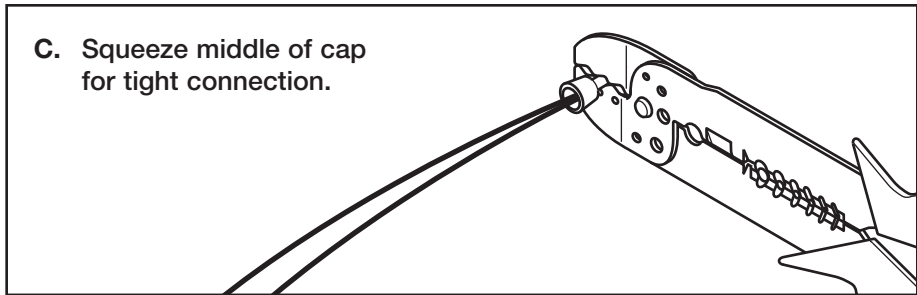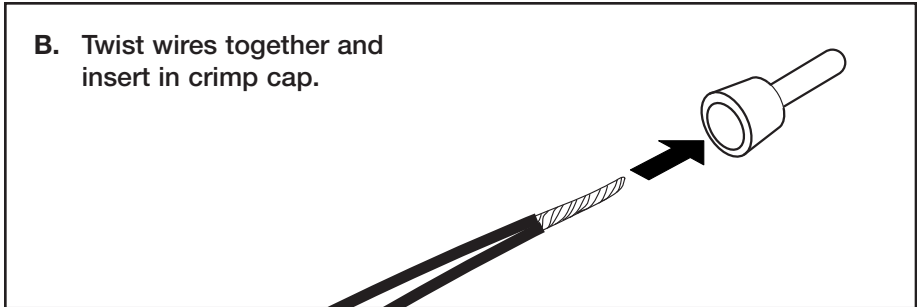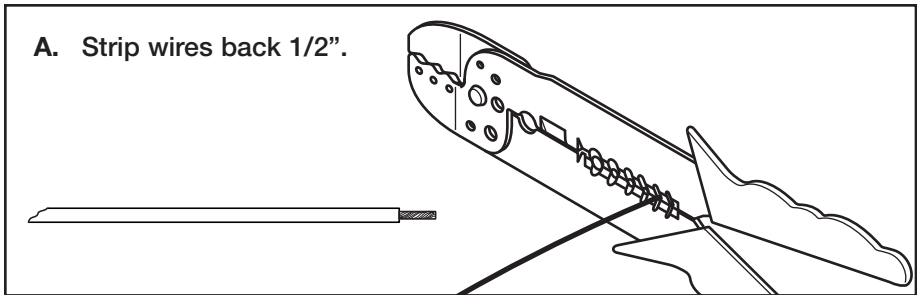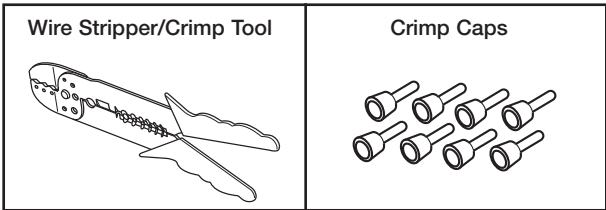

STEP 2 -- CONTINUED

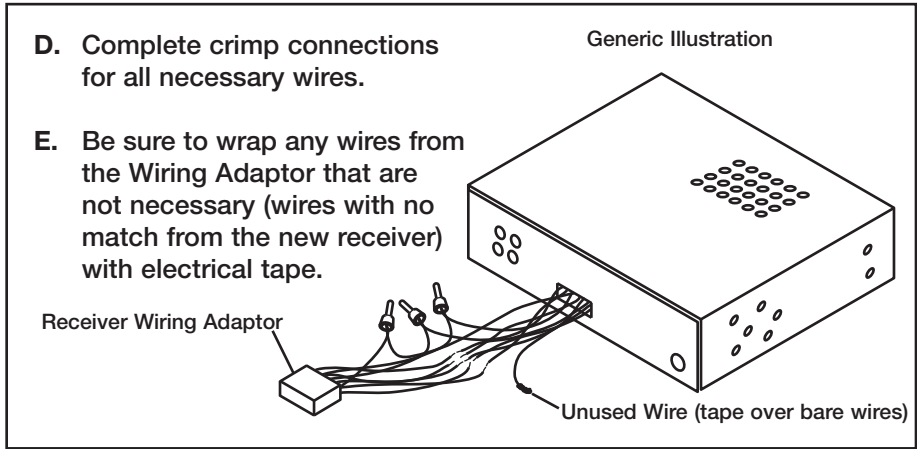

STEP 3 -- APPLICATION

