


Typical Shaved Door Kit 35LB

Installation Instructions

(Click on picture to purchase part.)

- ⚠️ SOLENOID MOUNTING BRACKET IS TO BE USED ACCORDINGLY FOR MOUNTING, YOU MAY HAVE TO ADJUST IF NEEDED.
- ⚠️ RELEASE CABLE MUST HAVE A SNUG FIT. CUT CABLE AS REQUIRED AND ADJUST WITH RELEASE END. DO NOT CONNECT ANYTHING TO TERMINALS 1, 4 AND 10.
- ⚠️ TO BE LOOPED THROUGH DOOR MECHANISM.
- ⚠️ INSTALL 30 AMP FUSE NO MORE THAN 3 INCHES FROM THE POSITIVE POST.

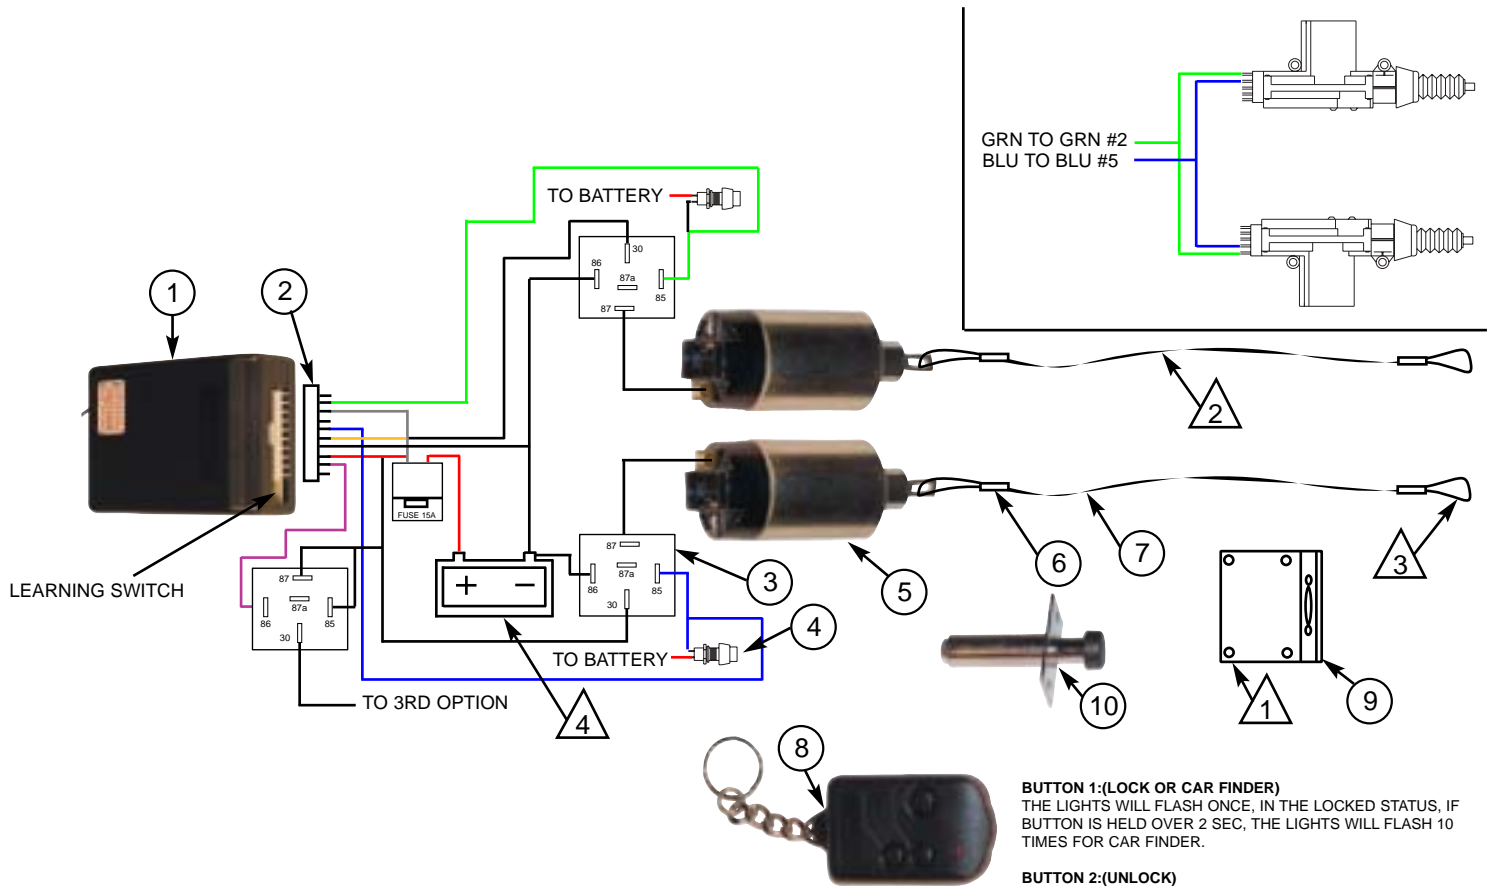

HOW TO SET LEARNING TRANSMITTER

PRESS LEARNING SWITCH ON THE REMOTE CONTROL BOX. THE PARKING LIGHTS WILL STEADY LIGHT, PRESS ANY BUTTON ON THE TRANSMITTER WITHIN 10 SEC. THE LIGHTS WILL FLASH ONCE TO CONFIRM THAT THE CODE HAS BEEN LEARNED. THE SYSTEM CAN LEARN A TOTAL OF 3 FUNCTIONS MAX.

WIRE COLOR DESCRIPTION

1	BROWN	RELAY 1, NC. POINT FOR LOCK	NOT USED
2	GREEN	RELAY 1, COM. POINT FOR LOCK	TO SOLENIOD
3	GRAY	RELAY 1, NO. POINT FOR LOCK	+ 12V
4	WHITE	RELAY 2, NC. POINT FOR UNLOCK	NOT USED
5	BLUE	RELAY 2, COM. POINT FOR UNLOCK	TO SOLENIOD
6	ORANGE	RELAY 2, NO. POINT FOR UNLOCK	+ 12V
7	BLACK	TO BATTERY NEG. OR CAR BODY	GND
8	RED	TO BATTERY (+12V)	+12V
9	PURPLE	CH1 FOR (-500MS PULSE)	OUTPUT 3RD CHANNEL
10	PINK	PARKING LIGHTS	NOT USED

BUTTON 1:(LOCK OR CAR FINDER)

THE LIGHTS WILL FLASH ONCE, IN THE LOCKED STATUS, IF BUTTON IS HELD OVER 2 SEC, THE LIGHTS WILL FLASH 10 TIMES FOR CAR FINDER.

BUTTON 2:(UNLOCK)

AFTER UNLOCK POWER LOCKING THE LIGHTS WILL FLASH 3 TIMES.

BUTTON 3:(TRUNK RELEASE)

THE PURPLE WIRE (CH1) WILL OOUTPUT A NEGATIVE PULSE FOR TRUNK RELEASE OR CONNECTED (YC-50) AUTO CLOSE POWER WINDOWS ETC.

- 1 REMOTE CONTROL BOX
- 2 WIRING HARNESS
- 3 RELAY
- 4 OVERRIDE BUTTONS
- 5 SOLENOIDS
- 6 LOOP CRIMPS
- 7 RELEASE CABLES
- 8 TRANSMITTERS
- 9 SOLENOID MOUNTING BRACKETS
- 10 DOOR POPPERS