


11. Lower the part to the hatch and adjust for fit. It should fit evenly across the rear and side to side. Fore and alt adjustment should be made so the first blade will just clear the molding when the sunshade is raised with the hatch closed. It must also clear the roof when the hatch is raised with the sunshade closed. When adjustment is complete tighten hinge base locknuts and recheck fit.

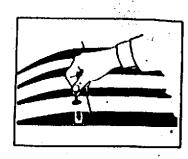


12. Using Hex Key provided, lock 1/4 turn fasteners onto the two rear brackets. Raise sunsheds, remove protective striftom ONE of the brackets and, while holding the brackets straight, lower part to glass - press tape firmly to glass unlock fastener, raise part and repeat for the other side. These adjustable brackets are preset at the factory, howevelf adjustment is required just loosen the nut and adjust a necessary.

PART #

12339878

Peer 6

INSTALLATION INSTRUCTION SHEET ☐ITEM REFERENCE ☐ TORQUE ☐ EXISTING AS PART OF

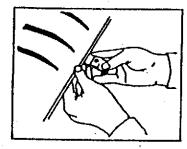

13. The two upper side brackets and the two lower side brackets are designed to snap and lock over the hetch trim molding beneath the appropriate 1/4 turn fastener. The installation procedure for all four is the same. With the rear fasteriers unlocked, (installed in step 12) lift the sunshade slightly and slide the bracket partially onto the molding under the appropriate fastener. Sight between blades of the end cap to see that the bracket hole is aligning properly with the fastener. When properly sligned, anap the bracket onto the molding. Lower the sunshade to check that the fastener slides freely into the bracket hole. Repeat the process for the remaining three brackets. Parform final check for fit - lock all six fasteners. The installation is now complete.

CARING FOR YOUR SUNSHADE

Wash your sunshade finish as you would your car's finish, with a good, non-abrasive cleaner. Since the finish is low gloss black, no waxing or polishing is required.