


TRW ABO0104R/T

P/N GM 10273333

Wiring / connectors

RECEIVER ASM-R/CON DR LK

	Size	Color	Pins	GM P/N	ACDelco	Metri-Pack
C1	small	blue	8-way	GM 12101875	PT266	# 12064766 (150 series)
C2	large	black	8-way	GM 15306189	PT1346	# 12064998 (280 series)

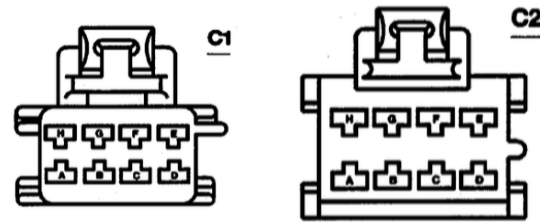

Details

C1	Color	mm2	Description
A	BLK/WHT	0.35	Prog mode (connect to GND while programming RC)
B	BLK	0.5	OUT: Hatch release (gives +12 V for 1 sec, when hatch button on RC pressed) *
C	n/u		
D	PNK	0.35	IN: switched +12 V (resets C2/D WHT = switches off dome light when key in Start)
E	n/u		
F	n/u		
G	n/u		
H	n/u		

C2	Color	mm2	Description
A	ORN/BLK	0.8	(LH power door lock switch: lock), not used
B	RED/BLK	0.8	(LH power door lock switch: unlock), not used
C	GRY	0.8	OUT: lock all (gives +12 V for 1 sec, when lock button on RC pressed) *
D	WHT	0.5	OUT: dome/courtesy light (grounded for 40 sec when unlock button pressed first time)
E	BLK	0.35	GND
F	ORN	0.5	IN: +12 V constant
G	TAN	0.8	OUT: LH/driver side door lock actuator (gives +12 V for 1 sec, when unlock button on RC pressed) **
H	TAN	0.8	OUT: RH/resp. all door lock actuator (gives +12 V for 1 sec, when unlock button on RC pressed) **

* duration of click doesn't matter, always 1 second, not repeated

** When unlocking on C2 pin G and H are cycled alternately, with G first, second time H, then G again and so on...